

ProtecTable 500-1



The Protected Search - Counter

The New Solution for Enhanced Security and Safety during Check Point operations

Serves as a Protected Search Counter

- Quickly and Safely Contains Suspicious Items
- Suspected item falls into Suspended Receptacle
- Blast and Fragments are Confined
- The ProtecTable looks like any regular Search Counter
- Placed between inspector and visitor

“Protectable 500-1” designed to safely contain suspect carry on luggage when inspected at check points and defined as suspect. The unit will direct the explosion products to be released upward and will prevent sideways (360°) damage from fragments. The wheels enable EOD people to move the unit with the suspect package to more safe area for any further checks and during every day use to move it easily from point to point (mobile check point).

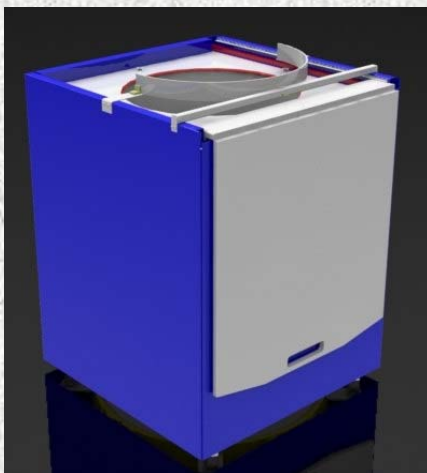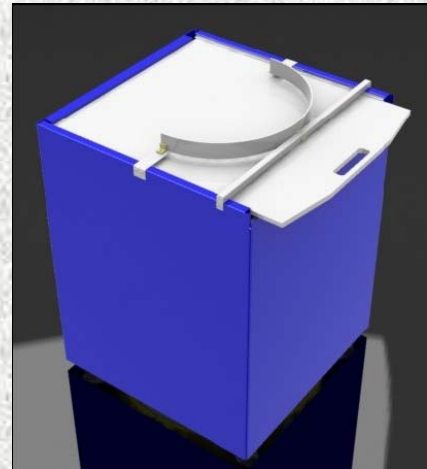

General specifications:

External dimensions - (Approx.)

L-850mm

W-750mm

H-1010mm

Weight –less than 450 kg

Internal Diameter – suspect package area – 500mm

Protective criteria – 1 kg of T.N.T. or equivalent.

- Mobile on wheels.
- Shock absorbing material at the bottom of detonation chamber to prevent damage of the falling object.
- Optional arrangements for using X-Ray scan of the suspect package while in the safe area.

K.P.S - KARIL PROTECTIVE SYSTEMS LTD.

P.O.B 4133 Herzeliya 46140, Israel Tel: +972-9-9568212 Fax: +972-9-9568141
E-mail: karil@mistralgroup.com www.karil.com or www.mistralgroup.com